


## Drilling template

FiberTwist FTU-1000, FiberTwist FTU-2000, FiberTwist Bracket-2

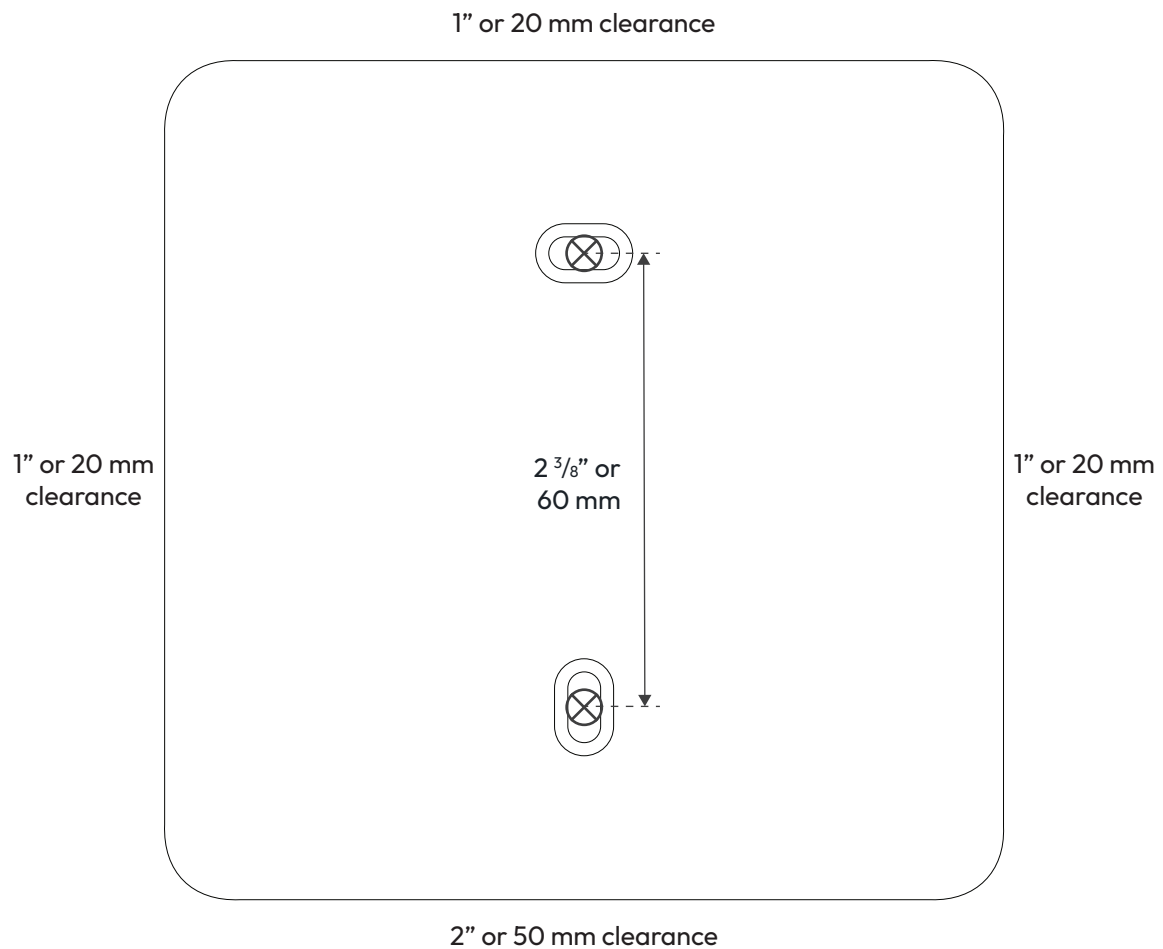

- ⊗ Drill bit Ø       $\frac{3}{16}$ " or 5 mm
- Hole depth    2 <sup>1</sup>/<sub>4</sub>" or 30 mm

### Instructions

- Print on A4 paper without scaling.
- Use the drilling guide to drill the holes, insert plugs and put screws into place.
- Please leave enough free space around the housing for proper installation of the equipment, cabling and ventilation.